

目 录

使用时注意事项

产品

装箱清单

使用说明

保养方法

常见故障分析及排除

.....

.....

.....

.....

.....

.....

.....



警告

 
勿将头发卷入进纸口

 
1

 
产品参数

装箱清单

名称	数量	备注
碎纸机	1台	
	1份	
	1份	
	1份	

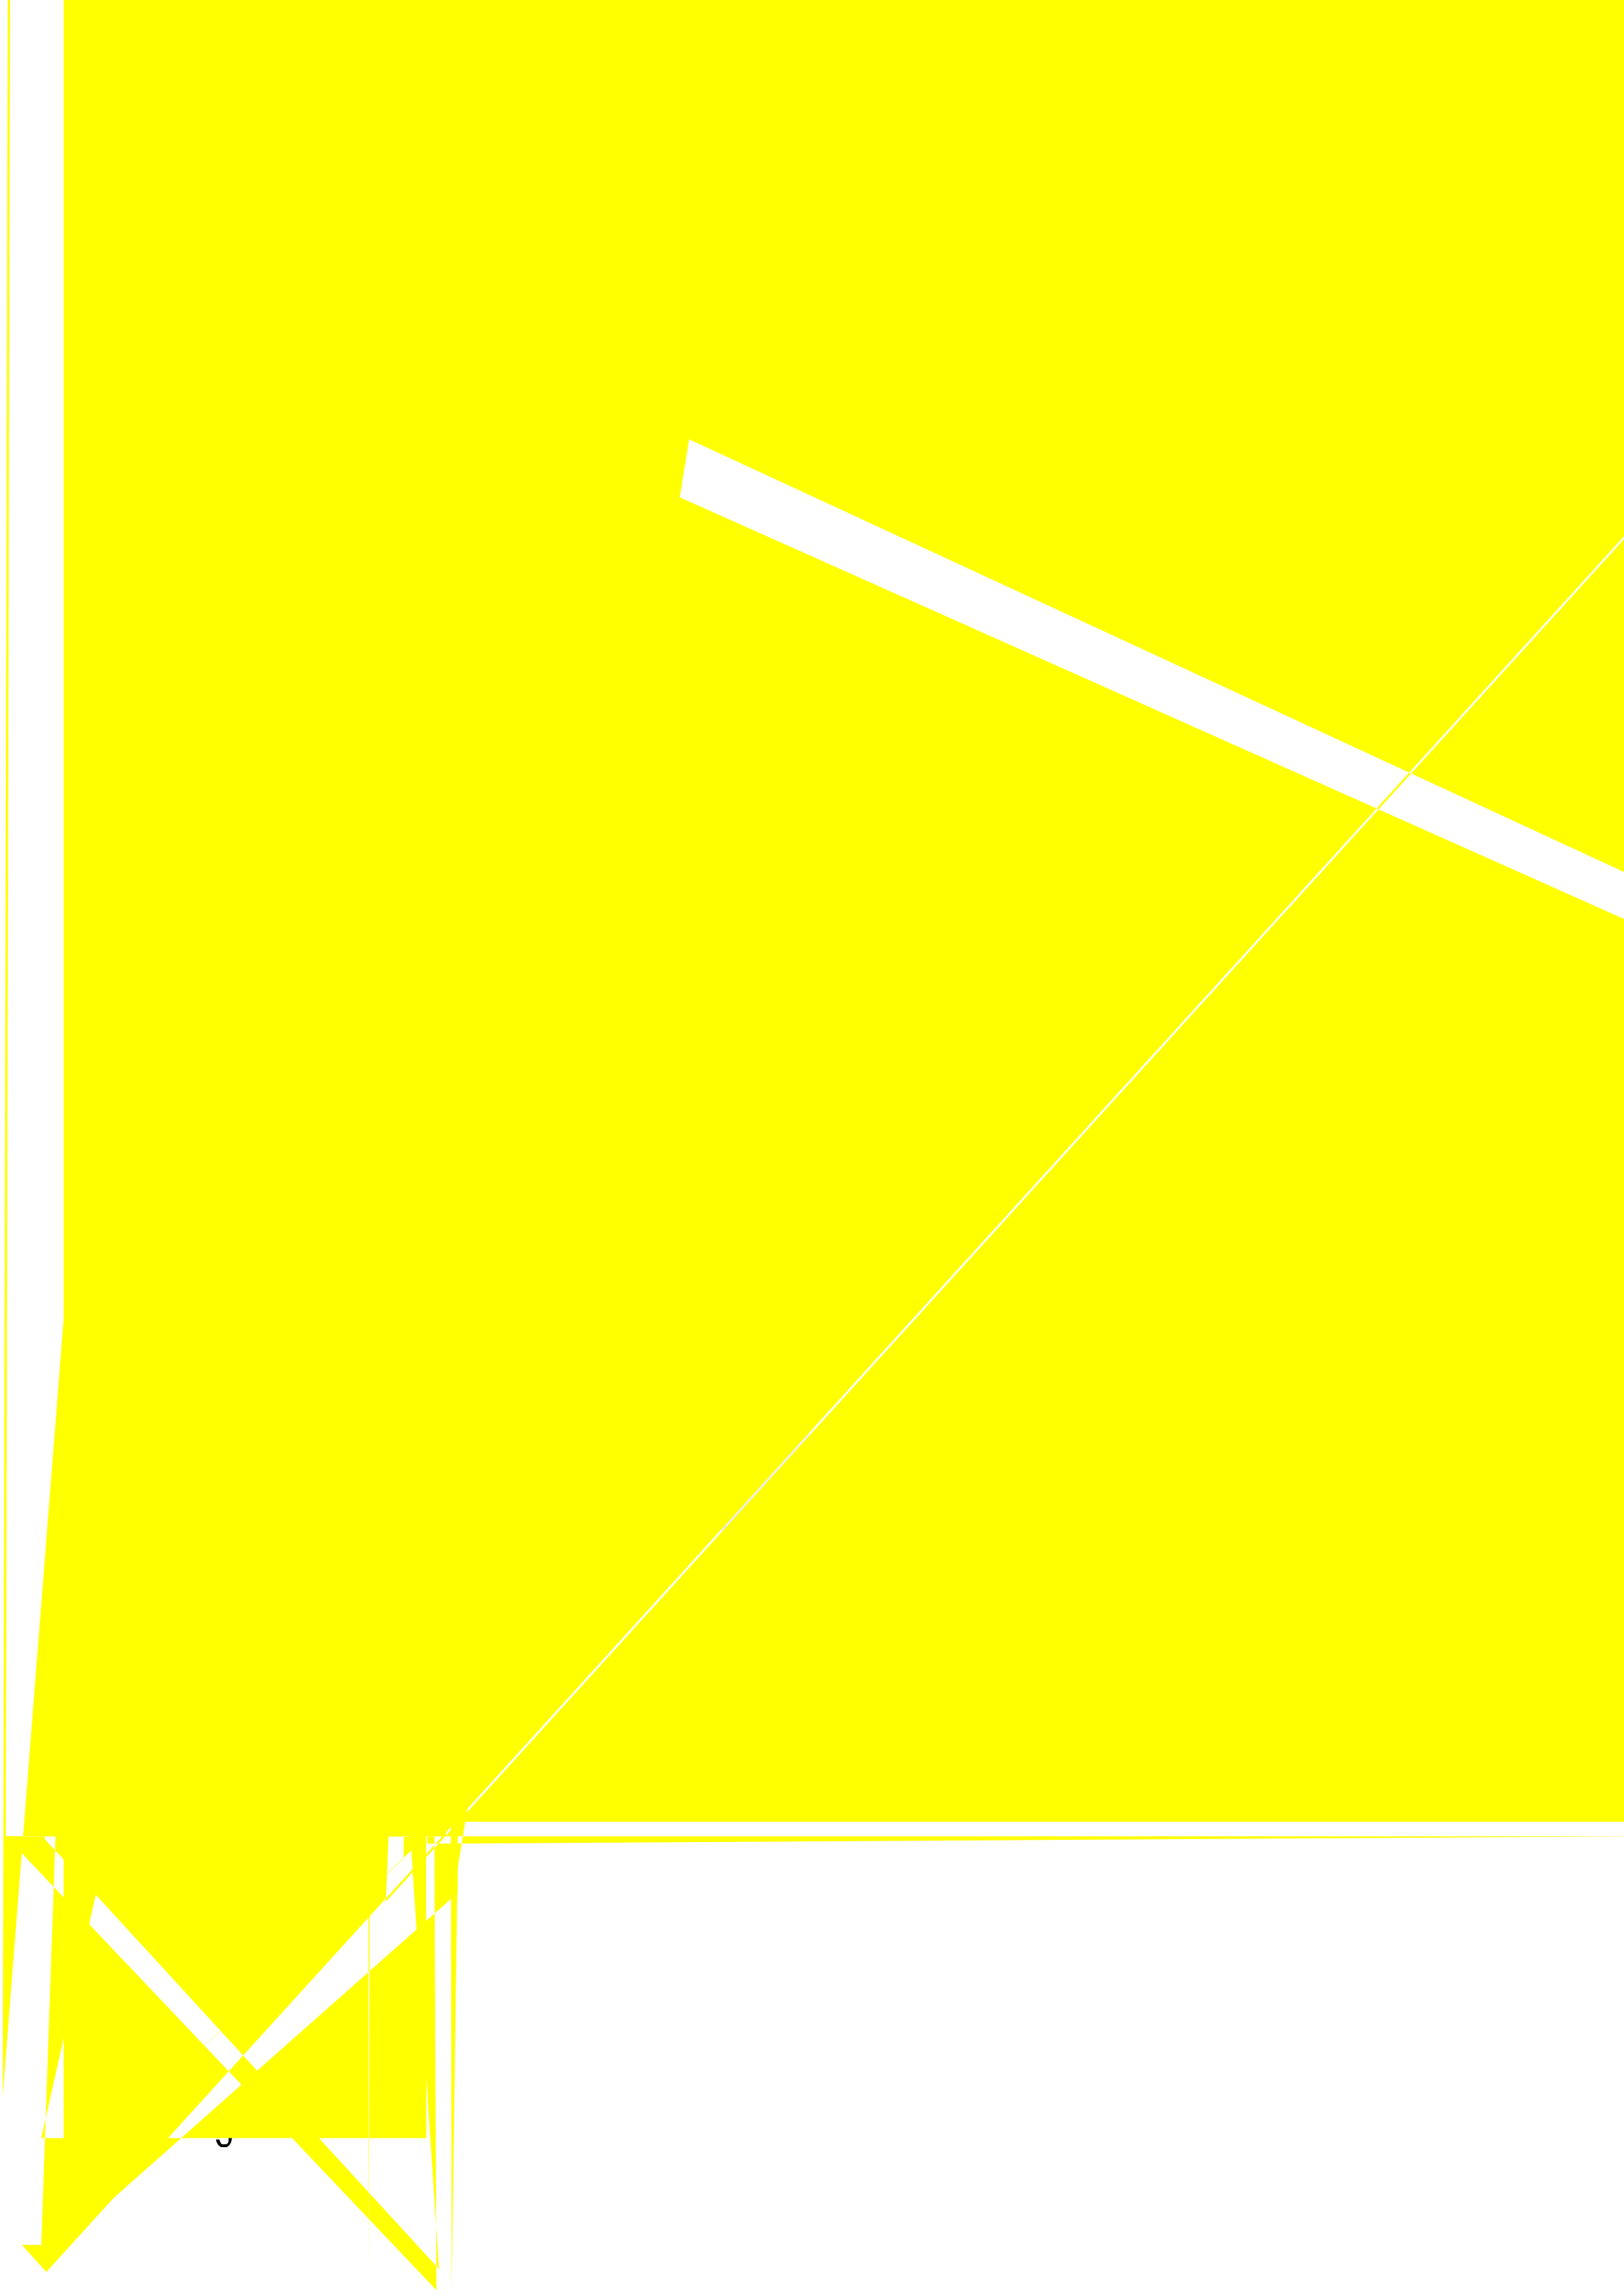




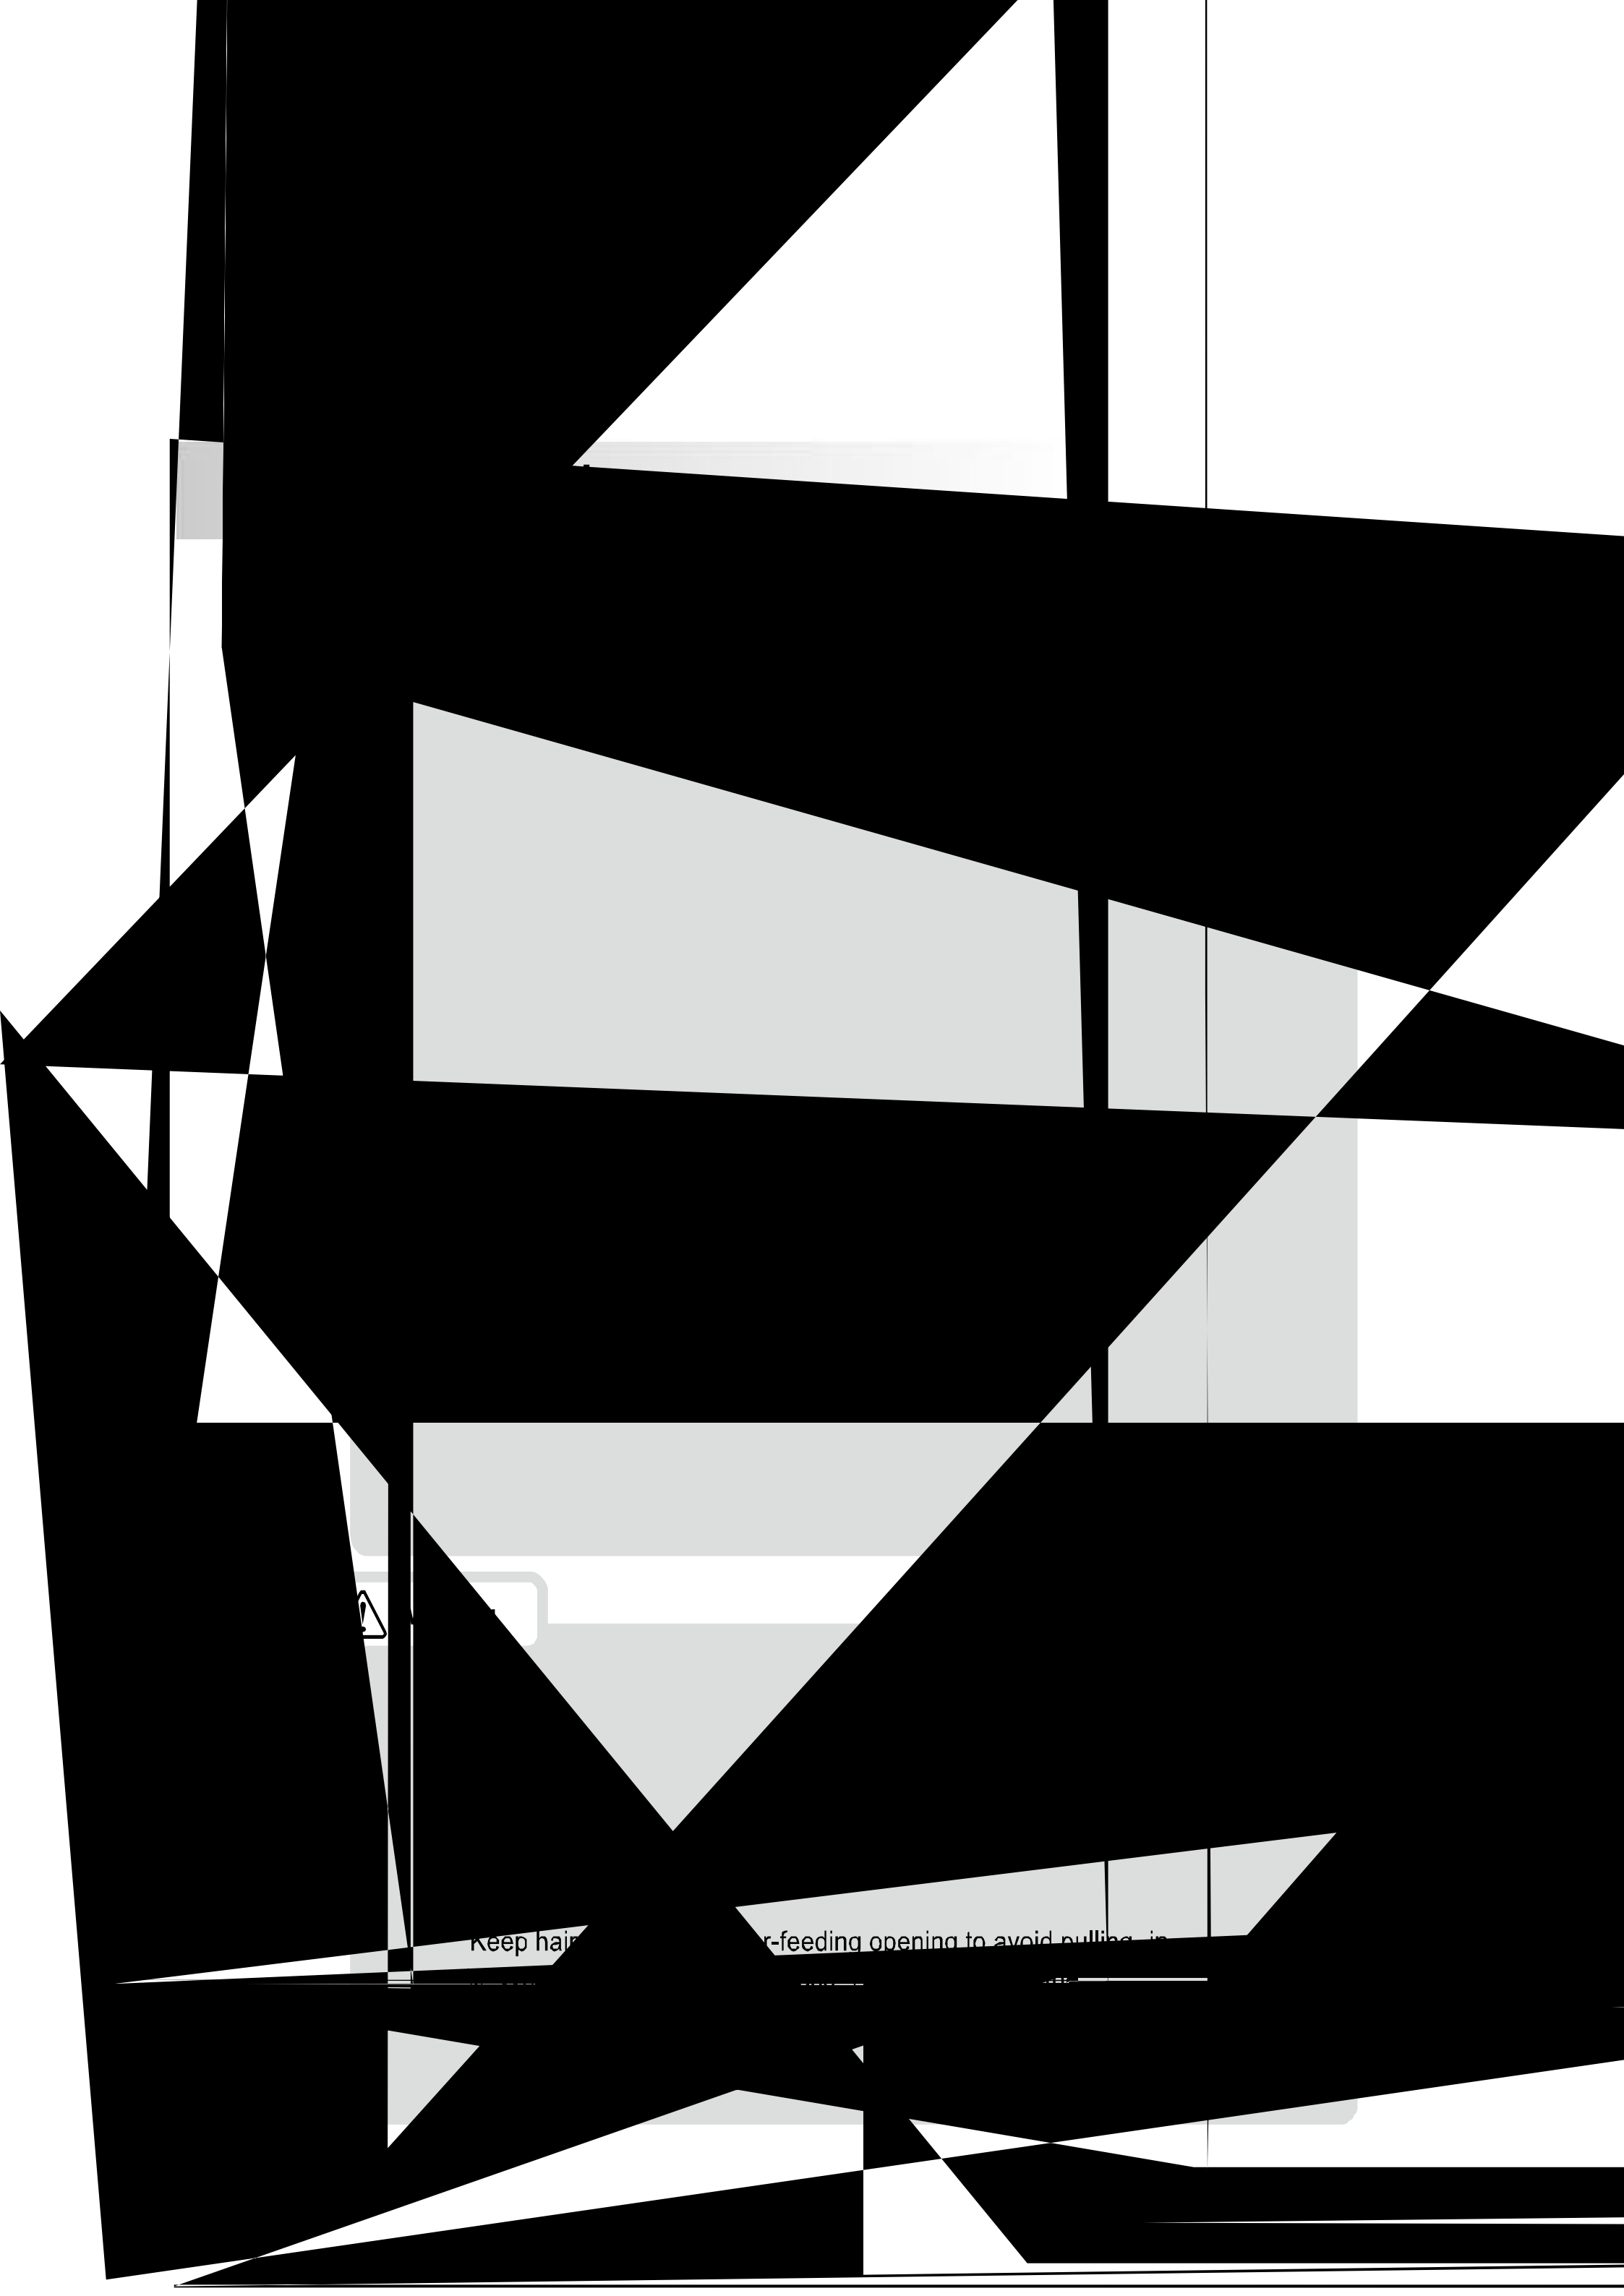

keep hair away from feeding opening to avoid pulling in

 Specific

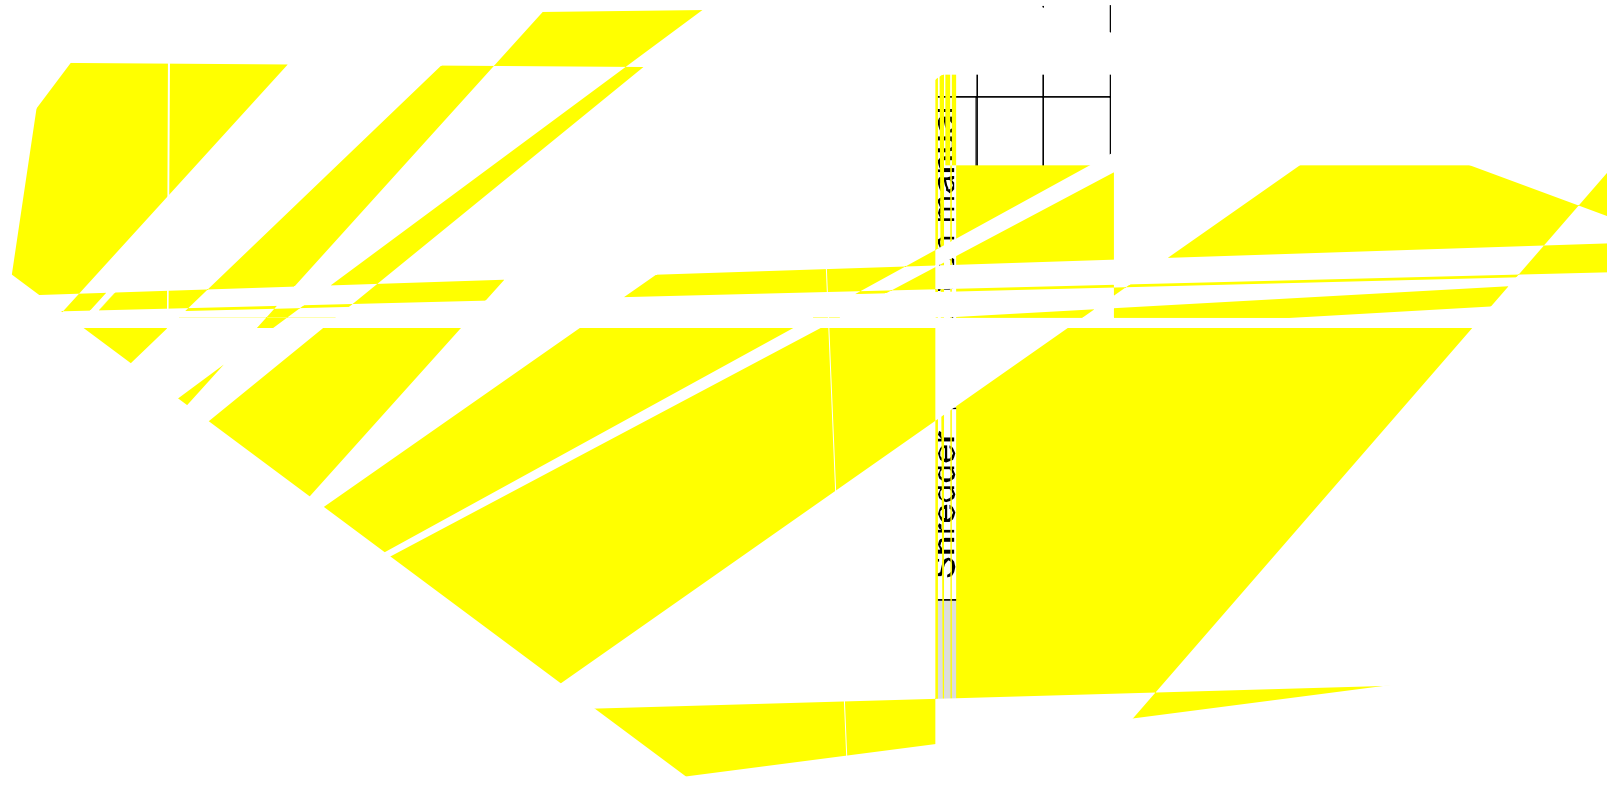

Shredder



Maintenance

1. Pull out the power plug from the socket of power supply before maintenance
2. The maintenance by user is only limited to cleaning visible surface of the shredder.
3. When cleaning the surface of the shredder, do not allow water to drop into the interior of the shredder.

Trouble Analysis & Troubleshooting

	TROUBLE ANALYSIS	TROUBLESHOOTING
	plug disconnect, no power	C

全国联保，